



Service Information

3LWED4705FW

8537 976 65000

Last Modification: 09/05/17

Creation Date: 20/09/16


Spare Part List	2
Exploded View	4
Wiring Diagram	7

This document is only intended for qualified technicians who are aware of the respective safety regulations.
Subject to modifications

Spare Part List


Pos	12NC	Description
A002	4819 503 18053	Screw 8-18x3/8
A003	4801 101 00224	Clip control panel.
A004	4820 000 95993	Rear panel
A005	4820 000 95893	Screening
A006	4801 101 00173	Clip knob.
A007	4819 502 18332	Screw 8Ax3/8
A008	4819 503 18049	Screw
A009	4801 121 00607	Table top
A010	4820 000 95994	Knob white
A011	4820 000 95995	Timer
A012	4820 000 95996	Console assembly, white
A013	4820 000 95997	Knob timer assembly, white
A014	4820 000 95998	Switch pushbut.
A015	4820 000 07518	Screw 8-18 x 5/16
A016	4820 000 95999	Cable harness
A017	4801 121 01373	Bracket Harness
A018	4801 121 01374	Seal Harness
A019	4820 000 13135	Seal foam
A020	4820 000 13033	Nut
A021	4820 000 96000	Switch rotary
A022	4801 101 00198	Buzzer
B001	4819 417 19212	Hinge
B002	4819 503 18022	Screw 10-16x1/2
B003	4819 503 18053	Screw 8-18x3/8
B004	4820 000 95911	Seal
B005	4820 000 95902	Cover
B006	4819 034 04162	Clamp
B007	4820 000 95903	Rear panel
B008	4820 000 13111	Plug strike
B009	4819 290 68391	3397659 Terminal block.
B010	4812 012 31198	W10237959 LEADED DOOR SW SPST (IEC).
B011	4819 503 18241	Screw 6-20x7/8
B012	4819 034 04413	Plug white
B013	4801 121 00589	Clamp
B014	4819 503 18039	Screw 10-16x3/8
B015	4820 000 95906	Clip
B016	4819 462 79891	Foot.
B017	4819 401 18795	Terminal Block.
B018	4801 121 00527	Cabinet white
B019	4819 492 68608	Clip
B020	4820 000 13105	Lock front top
B021	4820 000 96001	Front panel white
B022	4801 121 00528	Pulley 50Hz
B023	4819 492 68609	Clip
B024	4820 000 96002	Door catch
B025	4820 000 96003	Gasket door
B026	4820 000 96004	Pad power cord
B027	4819 503 18242	Screw 8-18x1/2
B028	4820 000 07525	Hinge
B029	4819 361 58124	Motor , set.

Pos	12NC	Description
B030	4819 034 00500	Screw
B031	4819 464 18009	Support
B032	4819 358 18117	BELT
B033	4819 034 03431	Stop door
B034	4820 000 09375	PULLEY JOKEY
B035	4820 000 13116	Door inner
B036	4820 000 96005	Door outer white
B037	4820 000 95909	Door handle white
B038	4820 000 95910	Seal and bearing
B039	4819 310 38733	Plate connector srew kit.
B040	4820 000 13115	Cover door lock
B041	4820 000 13120	Bezel door lock
B042	4820 000 13137	Seal foam
B043	4820 000 13138	Seal spill guard
C001	4819 003 48368	Conveyor
C002	4820 000 07527	Nut 3/8-16
C003	4819 532 68661	Washer
C004	4819 466 69852	Gasket
C005	4819 502 18332	Screw 8Ax3/8
C006	4820 000 13123	Shield exhaust
C007	4819 252 28095	Thermal fuse
C008	4819 282 48311	Thermostat.
C009	4820 000 96006	Thermostat kit
C010	4819 515 48051	Wheel blower
C011	4801 121 00531	Cabinet fan wheel
C012	4820 000 95915	Clip
C013	4819 503 18022	Screw 10-16x1/2
C014	4801 121 00532	Air guide
C015	4801 121 00533	Thermostat 221 #F (105 #C)
C016	4819 530 88033	Washer
C017	4820 000 96007	Heating element
C018	4819 532 28227	Ring
C019	4819 310 38736	Accessories heating
C020	4819 004 89463	Screw
C021	4819 502 18294	Screw
C022	4819 466 69855	Gasket
C023	4819 034 03636	Agitator
C024	4819 532 68553	Clip
C025	4812 255 18228	Holder
C026	4819 006 92490	Agitator
C027	4820 000 95920	Drum
C028	4820 000 95919	Seal drum
C029	4820 000 95815	Screw
C030	4819 006 92526	Ring
C031	4801 121 00536	Panel rear bulkhead
C032	4819 528 78062	Trolley Kit
C033	4820 000 06856	W10359269 CN - SHAFT-DRUM ROLLER.
C034	4819 535 98423	Shaft left

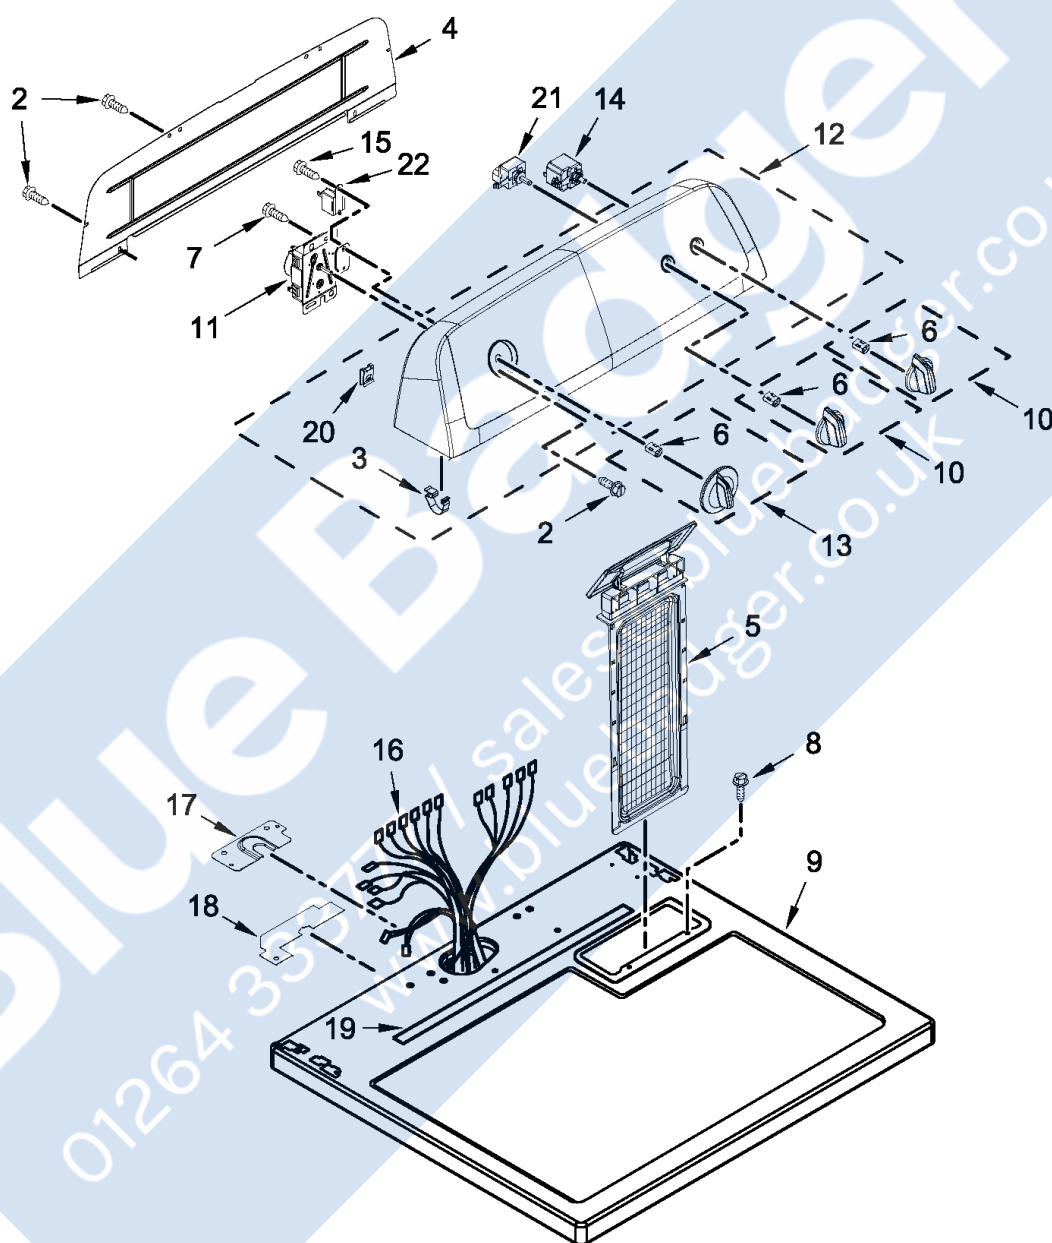Exploded View**A TOP AND CONSOLE PARTS****3LWED4705FW.A**

Exploded View


B CABINET PARTS

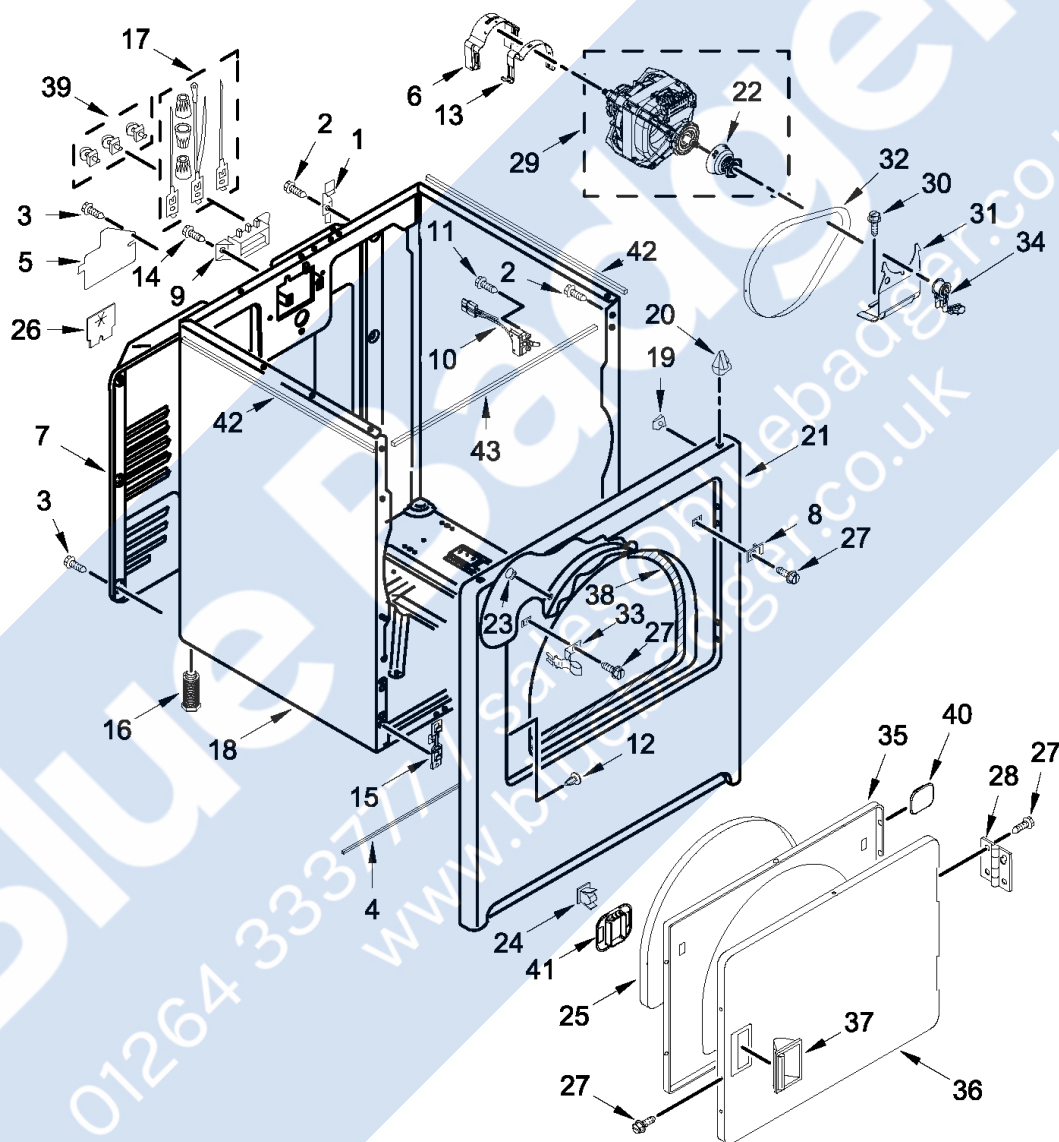

3LWED4705FW.B

Exploded View

C BULKHEAD PARTS

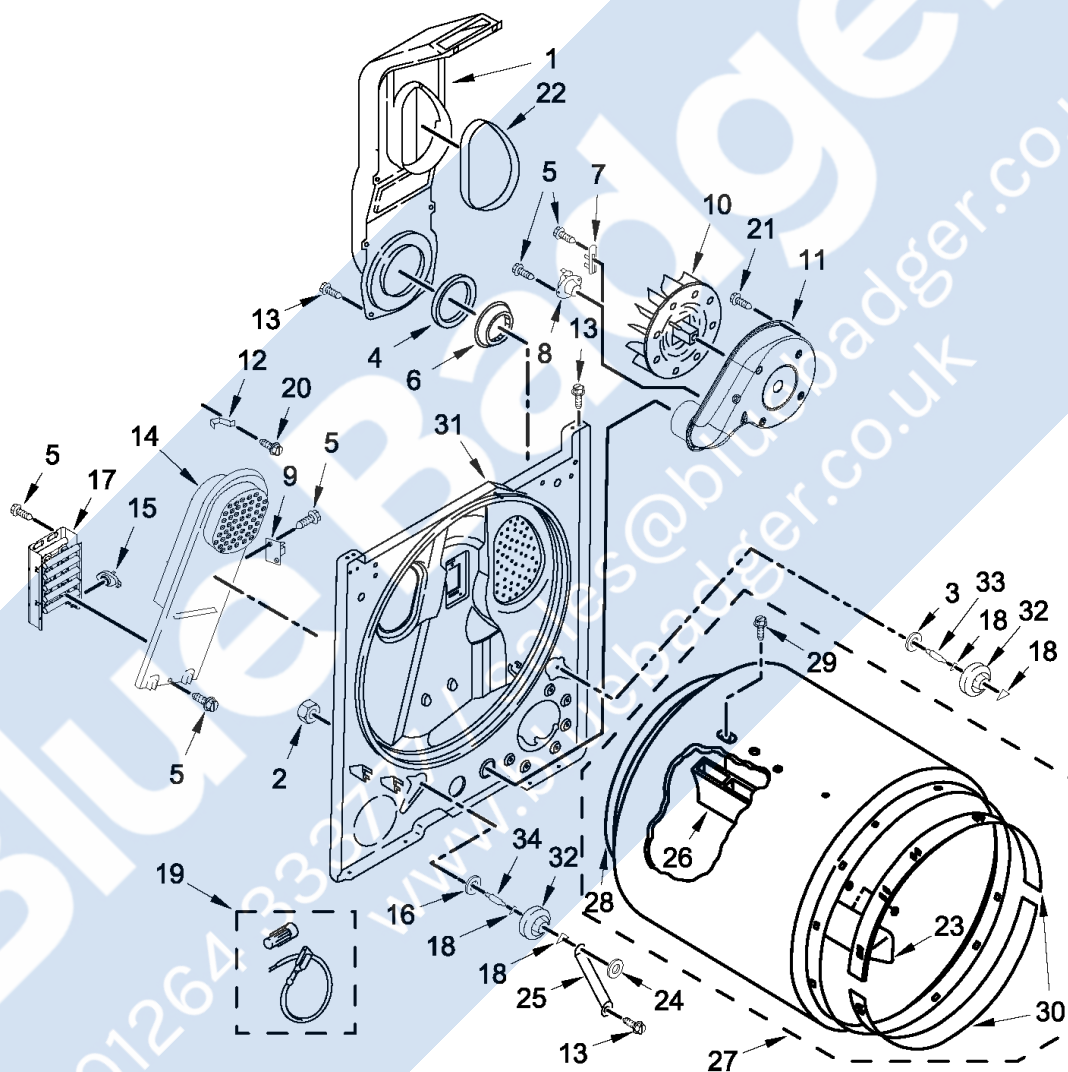

3LWED4705FW.C

Wiring Diagram

TIMER POSITION	1-X	1-Y	2-X	2-Y	3-X	3-Y	4-X	4-Y	5-X	5-Y
AUTO-REGULAR										
AUTO-SOFT/LOW HEAT										
COOL DOWN AIR										
END OF CYCLE										
TIMED-REGULAR										
TIMED-SOFT/LOW HEAT										
GUARD										

LEGEND
□ = OPEN
■ = CLOSED
◻ = DOESN'T MATTER
◻ = EITHER (NOT BOTH)
⊕ = CLOSED INTERMITTENTLY

LEGEND

- COMPONENT MAY OR MAY NOT BE USED
- TIMER CONSTRUCTION
- TERMINAL CONSTRUCTION
- SPLICE
- ∞ IN LINE CONNECTION

CAUTION: LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.

WARNING - DISCONNECT FROM ELECTRICAL SUPPLY BEFORE SERVICING UNIT.

